



1.

Always turn the male hooks straight and to the right. Match up to three tiles in a row.

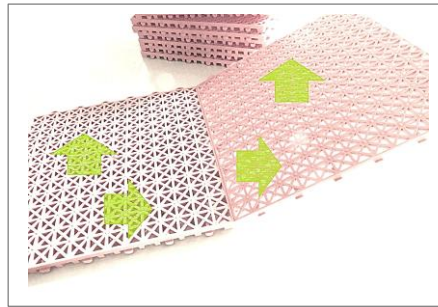


2.

Insert the female hook into the male hook and press until you hear the click. Make sure to check in before clicking on the click system at the bottom of the tiles.

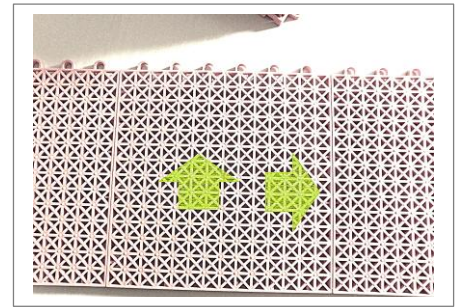


3.

Arrange the three tiles in a row and make sure the joints are well clicked. If they are not, press them freely with your hand, foot, or rubber hammer.

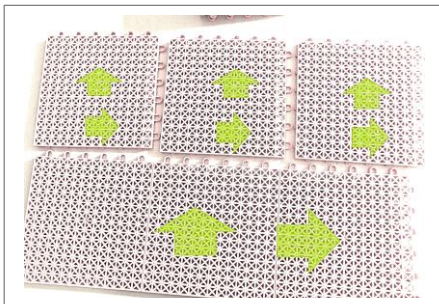


4.

After you have merged the first line, make a deal with the other.

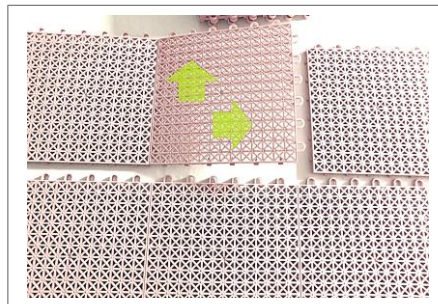


5.

Do not forget to turn the male hooks in the right and straight direction.

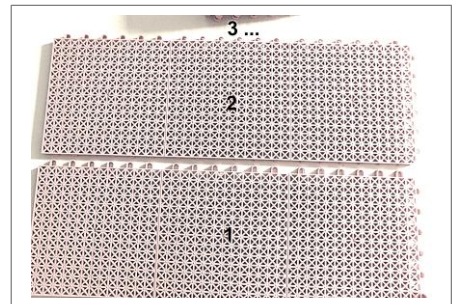


6.

Mix approximately four rows of three tiles in a row.

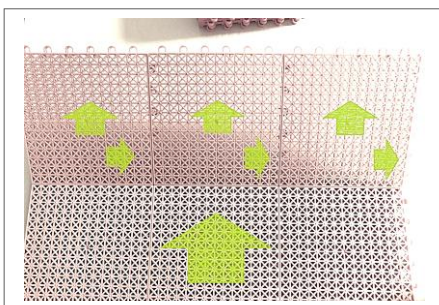


7.

SYSTEM 1 / Align the rows and insert the female hooks for the male hooks and press until you hear the click.

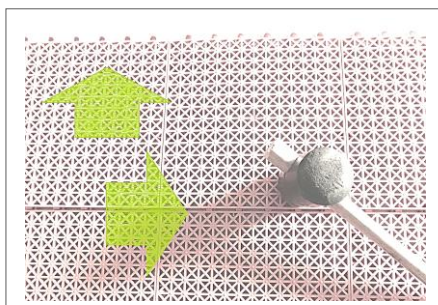

8.

SYSTEM 2 / Align the rows and attach them to the joint. Lightly squeeze the compound with the rubber hammer.

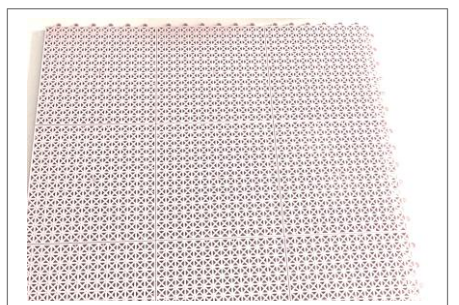

9.

You got a flat surface. Prepare the surface of twelve tiles to cover larger areas and connect them later.